

 INSTALLATION GUIDE

OBEX  **CORTEX**  **FR**®

0250FR

Rail Blackout Tape

Class A2

Version 01.01.01

 **OBEX**®

Important Notes

- » Not tested for installation onto cementitious surfaces, or for cementitious products to be installed over the of 0250FR
- » Product must be stored above 10°C before installation
- » Surfaces must be clean, dry and free of dust or other loose particles
- » The adhesive is pressure sensitive so it must be firmly rolled
- » The product should be installed at or above 5°C
- » Maximum 50mm open joints.



1

Install metal support rails as per manufacturers guidance.




2

Select a roll of OBEX CORTEX 0250FR Rail Blackout Tape the appropriate width for the support rail. Starting from one end of the rail remove the release liner, then adhere the tape to the rail, ensuring firm pressure is applied to achieve a strong bond.



3

Cut the tape to length and continue with additional rails.

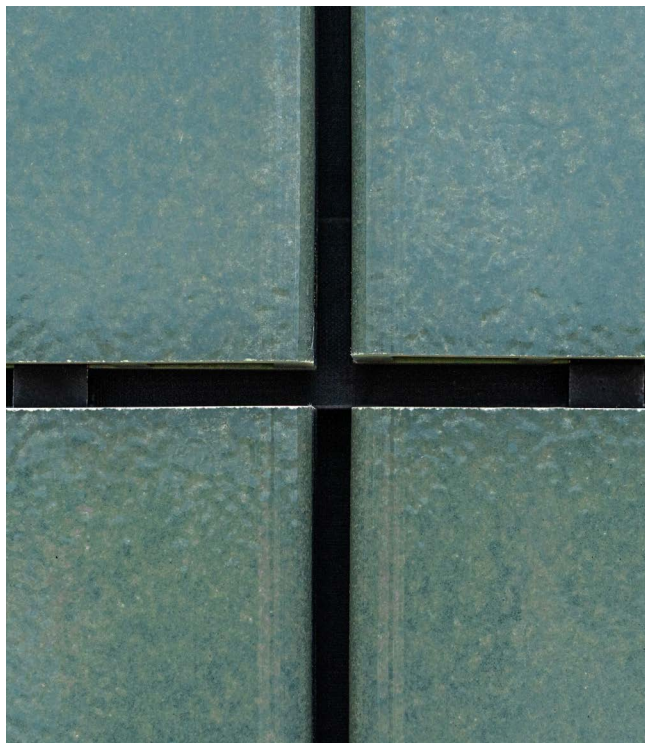

4

Once the cladding is installed this is how the tape should appear.



OBEX Protection Ltd. Unit 5 St. Modwen Park, Norton Road, Broomhall, Worcester, WR5 2QR

Call: +44 (0) 1905 337800 | **Email:** sales@obexuk.com | **Visit:** www.obexuk.com

© Copyright 2022 OBEX. All rights reserved. Company Registration No. 09157067, VAT No: 868 7649 48